

Cable Locator

Transmitter

- The 5500 CB transmitter is a great tool for locating and identifying cables and individual conductors.
- Designed for locating unenergized cables and powered cables.
- Voltage measurement for cables :
ACV 12V~300V
DCV 12V~300V
- Signal Transmission
 - Transmission Power Level Selection (includes 1, 2, 3)
 - Transmission Signal Code Selection (includes F, E, H, d, L, C, O, A)
- Flashlight & Back Light function.
- The Silent Mode (Disable Button Beep).
- The Level Bar Display on the LCD Screen (the transmission power level indication).
- The Action Wave Display on the LCD Screen (when the signal is transmitted).
- Auto power off function.




Receiver

- The 5500 CB receiver is designed to identify and trace wires or cables.
- Designed for locating unenergized cables and powered cables.
- Signal Detection (includes Level, Code, Value)
 - Automatic Mode
 - Manual Mode (There are 9 levels to select)
- UAC Mode (AC Power Line Detection).
- Flashlight & Back Light function.
- The Silent Mode (Disable Button Beep & Frequency Tone).
- The Danger Symbol is to indicate the AC voltage on the Line.
- The Level Bar Display on the LCD Screen for the signal value & the UAC power value.
- Auto power off function.


INSTRUMENT LAYOUT

Transmitter

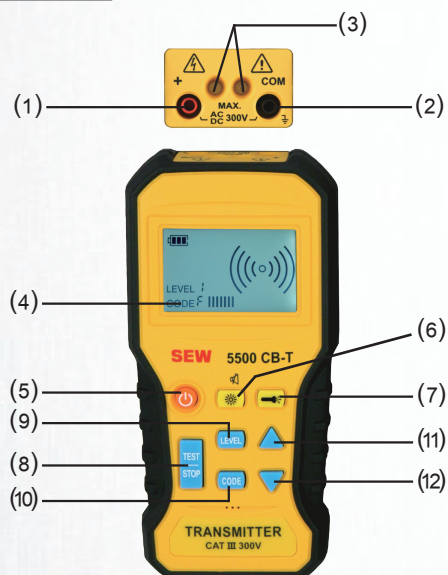

- | | |
|-------------------------------|-----------------------|
| (1) "+" Terminal | (7) Flashlight Button |
| (2) "COM" Terminal | (8) TEST/STOP Button |
| (3) Flashlight | (9) LEVEL Button |
| (4) LCD | (10) CODE Button |
| (5) ON/OFF Button | (11) ▲ Button |
| (6) Backlight and Mute Button | (12) ▼ Button |

Receiver

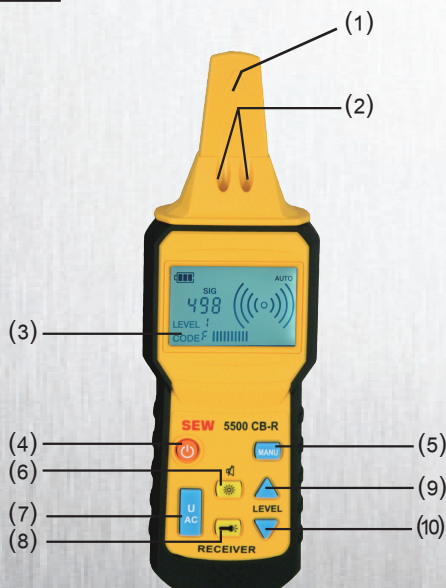

- | | |
|----------------------------|-------------------------------|
| (1) Sensor of the Receiver | (6) Backlight and Mute Button |
| (2) Flashlight | (7) UAC Button |
| (3) LCD | (8) Flashlight Button |
| (4) ON/OFF Button | (9) ▲ Button |
| (5) MANU Button | (10) ▼ Button |

SPECIFICATIONS

Transmitter

Output signal frequency	125kHz
Voltage measurement range	12~300V AC / DC
Accuracy	±(2%rdg+2dgt)
Display	LCD shows function and bargraph
Power source	1.5V (AAA) battery × 6
Fuse	690V/0.5A (6.3 × 32mm)
Operating temperature & humidity	0°C~40°C 80% R.H. Max.
Storage temperature & humidity	-10°C~50°C 80% R.H. Max.
Dimensions	188(L)×90(W)×47(D)mm
Weight (battery included)	Approx. 389g

Receiver

Detection depth	< 50cm
Display	LCD shows function and bargraph
Power source	1.5V (AAA) battery × 6
Operating temperature & humidity	0°C~40°C 80% R.H. Max.
Storage temperature & humidity	-10°C~50°C 80% R.H. Max.
Dimensions	247(L)×78(W)×45(D)mm
Weight (battery included)	Approx. 324g

- Safety Standard :
EN 61010-1 CAT III 300V
EN 61326-1
- Low battery indication:
"  " symbol appears and flashes on the LCD
- Accessories :
Instruction manual
Test leads (TEL-AL11-7A,
TEL-5500 EU, TEL-5500 LAH)
Alligator clip (AL-25C)
Spike
Batteries
Carry case

